



Notes:-

1. DIODE MODULES can be inserted at points D1 and or D2. X1 and or X2 to be removed accordingly.
2. F1 to be removed if external filter used (R12, R21 and R22 only). For R31 filter is integral.
3. MCB is external to Power Converter for R31.
4. Secondary winding for Bridge B is DELTA wound in R31.
5. Fire Sensor winding not included for L1 on R31.